Damaged and Defective Car Tracking Webinar

Updated Rule 108 work flow Feb'17




Agenda

- ➤ Rule 108 Flow
 - Overview of the new flow
- ➤ Sample Test Scenarios
 - Provide Salvage Value Flow
 - Reject and Accept Salvage Value
 - Provide Disposition Flow
 - Dismantle Flow in-flight incidents (old)



Rule 108 Flow

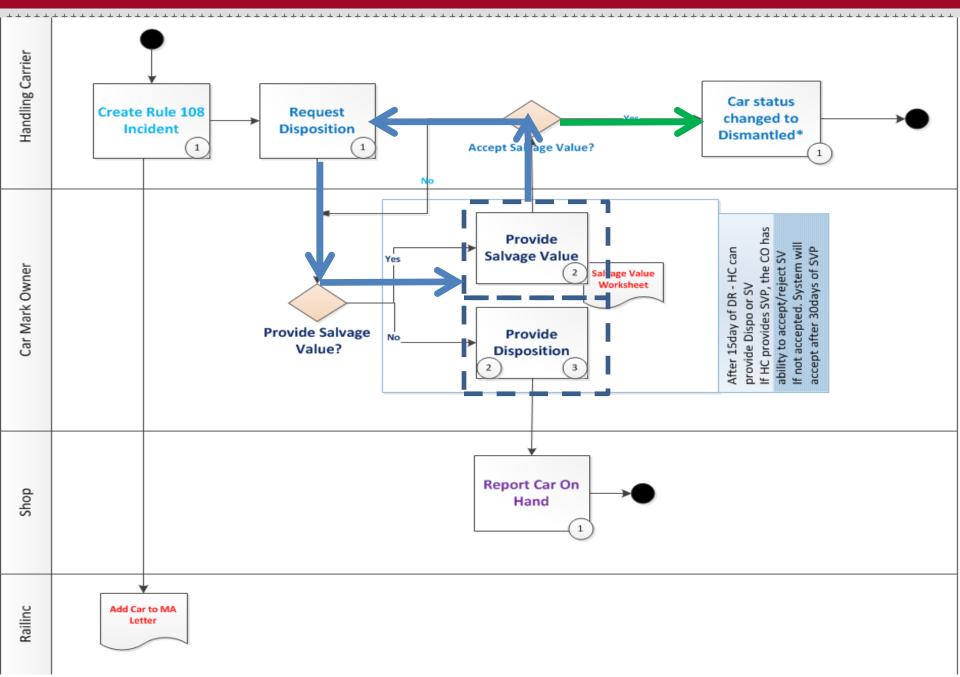

Provide Salvage Value Flow

- ➤ Create Incident and Request Disposition (HC)
- ➤ Provide Salvage Value (CO)
 - Use SV worksheet
 - Note: HC can provide SV after 15days of DR
- ➤ Reject Salvage Value (HC)
- ➤ Provide Salvage Value (CO)
 - Override SV
- ➤ Accept Salvage Value (Dismantled*) (HC)






Create and Request Disposition


Handling Carrier can Create Incident and Request Disposition



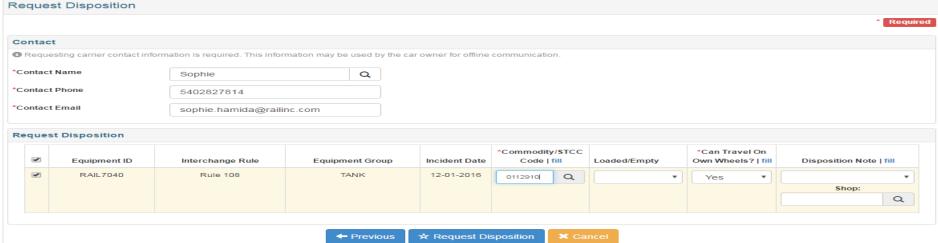

Provide Salvage Value

- Car Owner Provide Salvage Value or Disposition
- Handling Carrier can provide Salvage Value or Disposition after 15day of DR

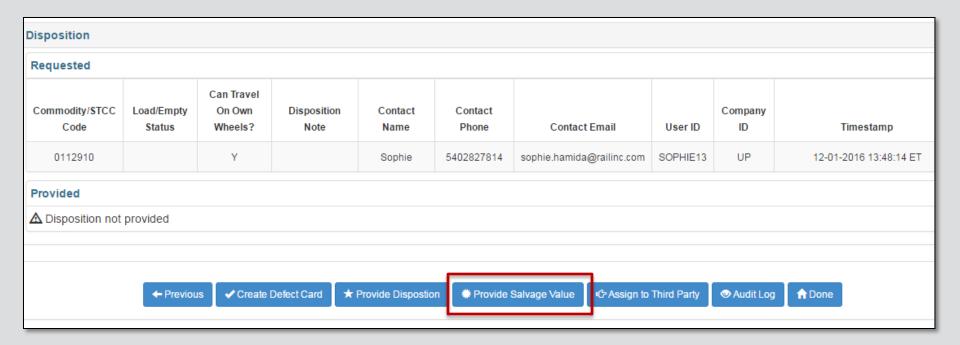





Provide Salvage Value

➤ Select "Calculate" button to view Salvage Value Worksheet

Salvage Value Calculation		
*Salvage Value:	USD	Calculate
*Dismantling Cost:	USD	
*Max Credit Value:	USD 🔽	
		→ Continue




Salvage Value Worksheet

Enter Metallic Weights

SALVAGE VALUE WORKSHEET						
Equipment Type: © Car © Rack RAIL (Owner) With reference to DDCT Incident UP00278388 request of AAR Salvage Value for RAIL7040, identified at PHOENIX, AZ (797000000) on 12/01/2016.						
Umler Light Weight: Estimated Metallic Weight:	80,000 lbs.	Non-Metallic Weight:	0 lbs.			
	Enter Weight	US Credit Rate	Credit Value			
Aluminum	0	0.51	\$0.00			
Stainless Steel	0	0.24	\$0.00			
Standard Steel	0	0.07	\$0.00			
TOTAL Salvage Weight	0.00	TOTAL Salvage Value	\$0.00			
A - Salvage Value of Disman	tled Car (Total Credit Value)		\$0.00			
B - Dismantling Cost (Gross t	ons (Light Wt. in lbs. [80000] / 2240) X	Value of job code 4489 [\$217.08])	\$7,752.86			
C - Max Credit Value (A-B)			-\$7,752.86			
Note: All job code rates are 6	calculated from fourth quarter of 2	2016 Price Master as of the date of	incident 12/01/2016.			
			Apply Cancel			

Provide Salvage Value Flow

- Select check box to Override Salvage value
- Ability to override SV, Dismantling cost and Max Credit Value

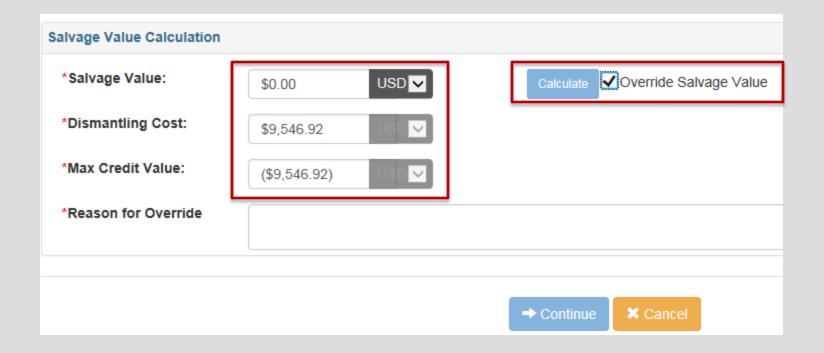




Sample Worksheet

SALVAGE VALUE WORKSH	EET						
Equipment Type: © Car © Rack RAIL (Owner) With reference to DDCT Incident CSXT00283937 request of AAR Salvage Value for RAIL1011, identified at PHOENIX, AZ (797000000) on 02/15/2017.							
Umler Light Weight:	95,333	lbs.	Non-Metallic Weight: 0 lbs.				
Estimated Metallic Weight:	95,333	lbs.					
	En	ter Weig	ght	US Cı	redit Rate	Credit Value	
Aluminum			0		0.52		\$0.00
Stainless Steel			0		0.24		\$0.00
Standard Steel			0		0.06		\$0.00
TOTAL Salvage Weight	0.00 TOT		AL Salvage Value		\$0.00		
					<u>Calculated</u> <u>Values</u>	Override Values	
A - Salvage Value of Dismantled Car (Total Credit Value)		\$0.00	\$0.00				
B - Dismantling Cost (Gross tons (Light Wt. in lbs. [95333] / 2240) X Value of job code 4489 [\$224.32])		\$9,546.92	\$9,546.92				
C - Max Credit Value (A-B)					-\$9,546.92	-\$9,546.92	

++++

Submit Salvage Value


Car status will be "Salvage Value Provided"

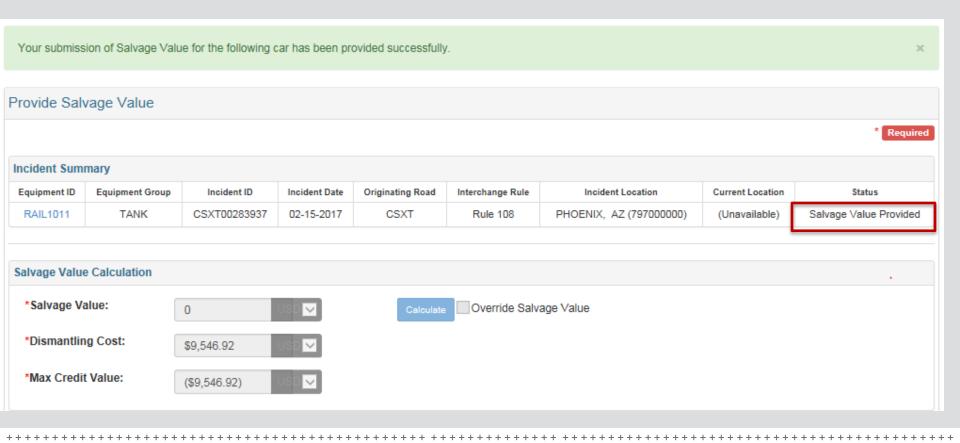



Reject Salvage Value

- ➤ Handling Carrier Admin user can reject salvage value
- Car Owner Admin can reject SV when HC has provided SV
- Car status will be "Disposition Requested"

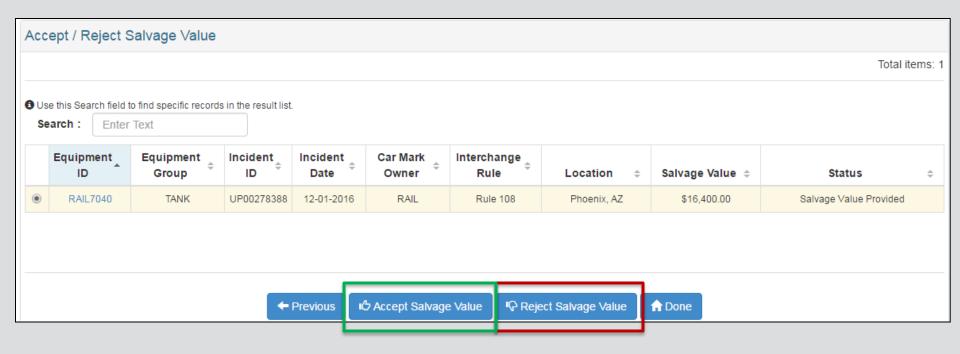






Reject Salvage Value


Enter Reject Salvage Value Reason

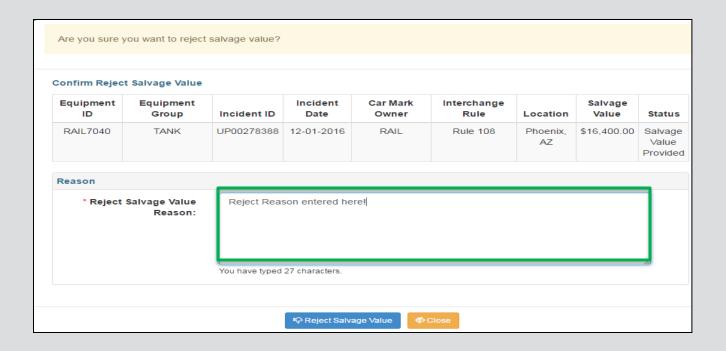



Reject Salvage Value


Car status will be "Disposition Requested"

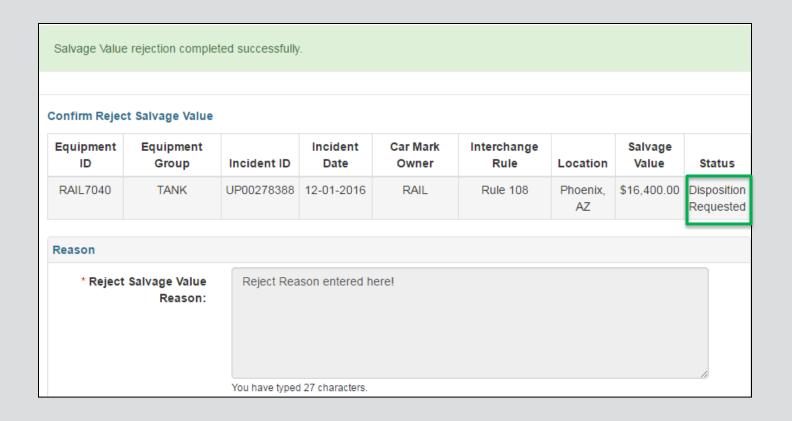




Accept Salvage Value

➤ Select Accept Salvage Value button

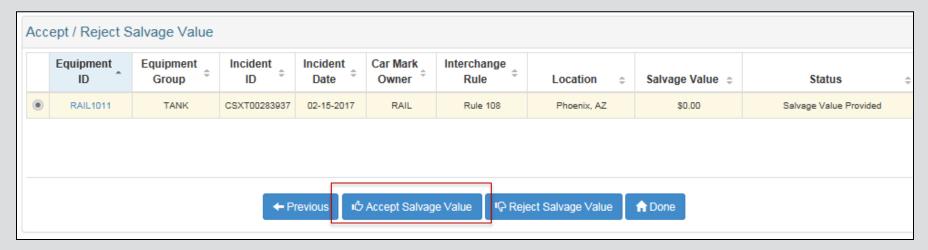

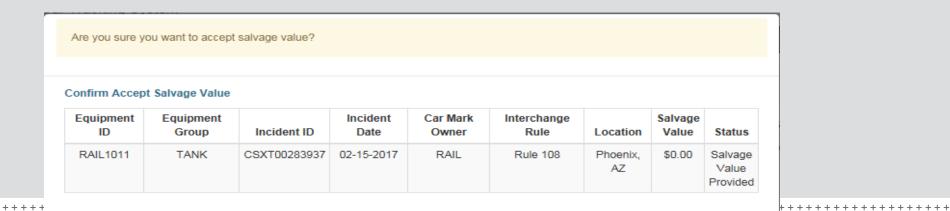


I**Ô** Accept Salvage Value




Accept Salvage Value

Accepting SV will set the car status to Dismantled and close the incident

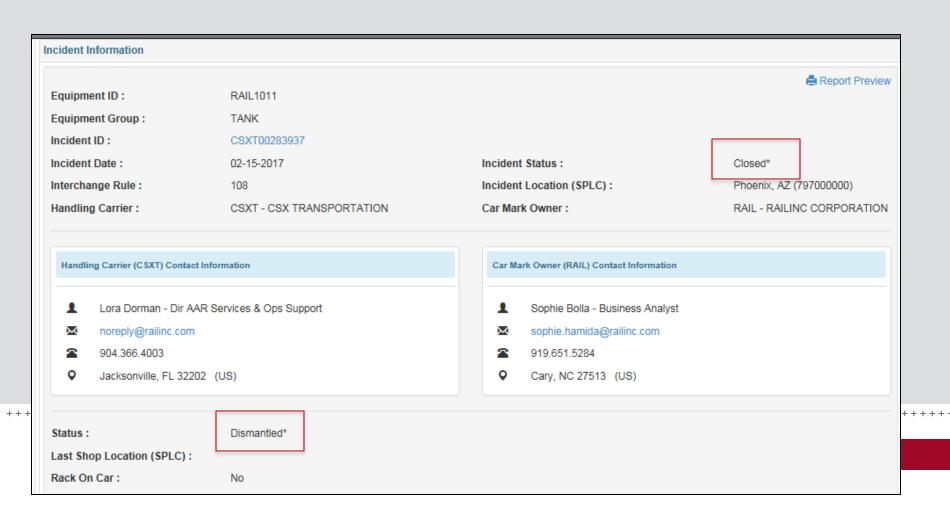

Provide Salvage Value

Car Owner can re-provide SV

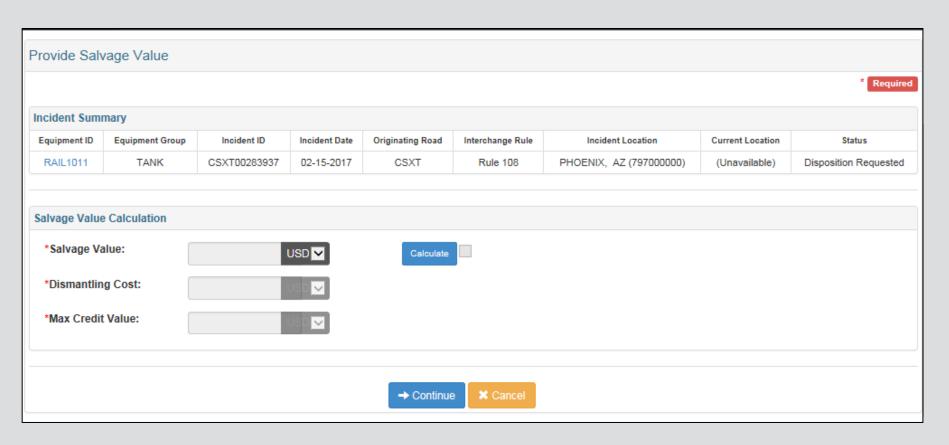






Provide Disposition Flow

- Car Owner can search and select a shop (listed in FindUs.Rail) to provide disposition
- Note: Handling Carrier can provide disposition after 15days of Disposition requested

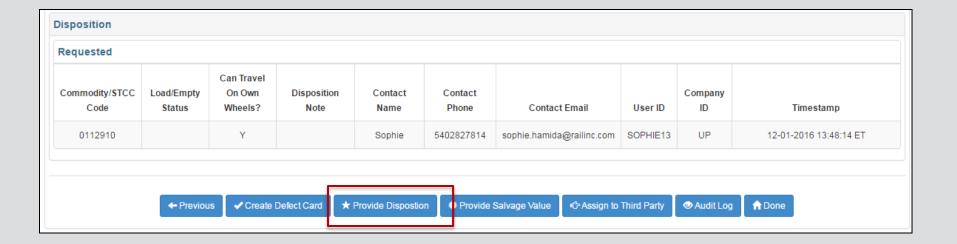






Provide Disposition Flow


- Car Owner can search and select a shop (listed in FindUs.Rail) to provide disposition
- Note: Handling Carrier can provide disposition after 15days of Disposition requested

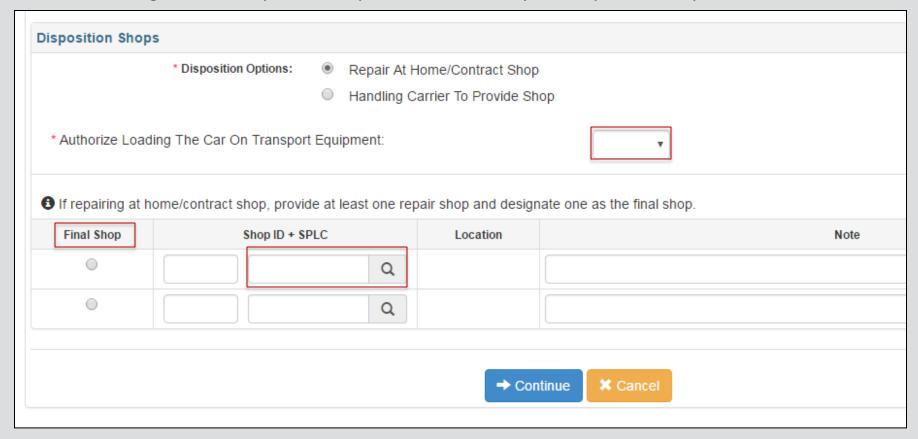




Rule 108 in-flight 'old' DDCT incidents

- The incidents earlier to deployment of new Rule 108 workflow, will continue the current process
- Provide Salvage Value flow will not be supported for 'old' incidents
- Car Owners can dismantle a car using 'Dismantle' button
- System will dynamically display 'Dismantle' button on UI for in-flight incidents

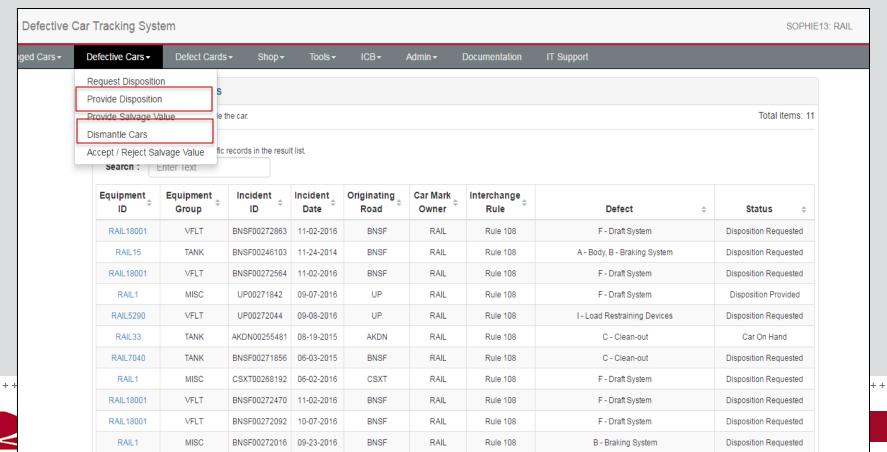

Rule 108 in-flight 'old' DDCT incidents

Car Owners can Provide disposition or dismantle a car

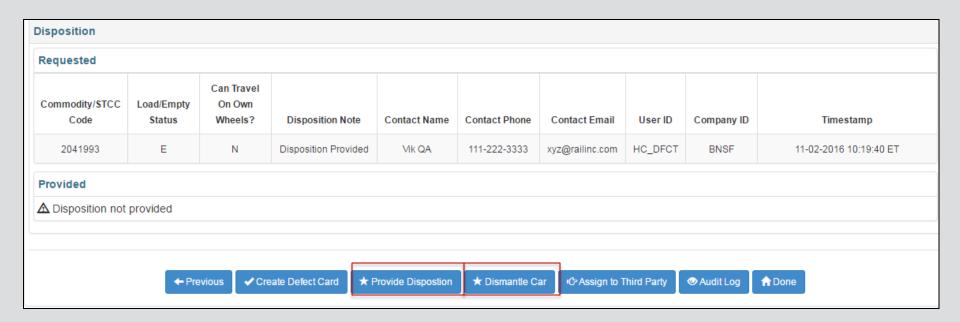





Rule 108 Notifications

* Notification is sent based on the contact listed for DDCT category in FindUs.Rail

Car Status	Action Performed By	Handling Carrier (HC)	Car Owner (CO)	Shop
Create and Request Disposition (DR)	НС	-	Yes	-
Provide Salvage Value (SVP)	CO/ HC (after 15days)	Yes (for CO action)	Yes (for HC action)	-
Accept Salvage Value (Dismantled*)	HC/CO (after 15days)	Yes (for CO action)	Yes (for HC action)	-
Reject Salvage Value (DR)	HC/ CO (after 15days)	Yes (for CO action)	Yes (for HC action)	-
Provide Disposition (DP)	CO/HC (after 15days)	-	-	Yes



Reference and Help Tools

- > DDCT product page provides access to:
 - User Guide
 - Accessible via application and DDCT product page
 - Demos
 - Available to help train your teams
 - Webinars
 - Register for upcoming webinars for detail
 - Link to DDCT product pagehttps://www.railinc.com/rportal/ddct



Railinc's Customer Support Center

For questions, contact
Railinc Customer Support Center (csc)

Email- csc@railinc.com

Phone-877-RAILINC





QUESTIONS



