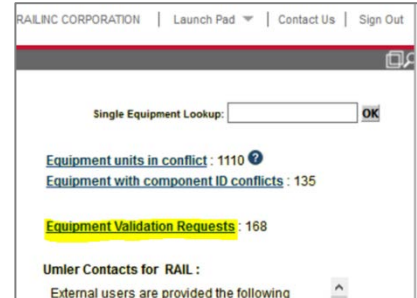
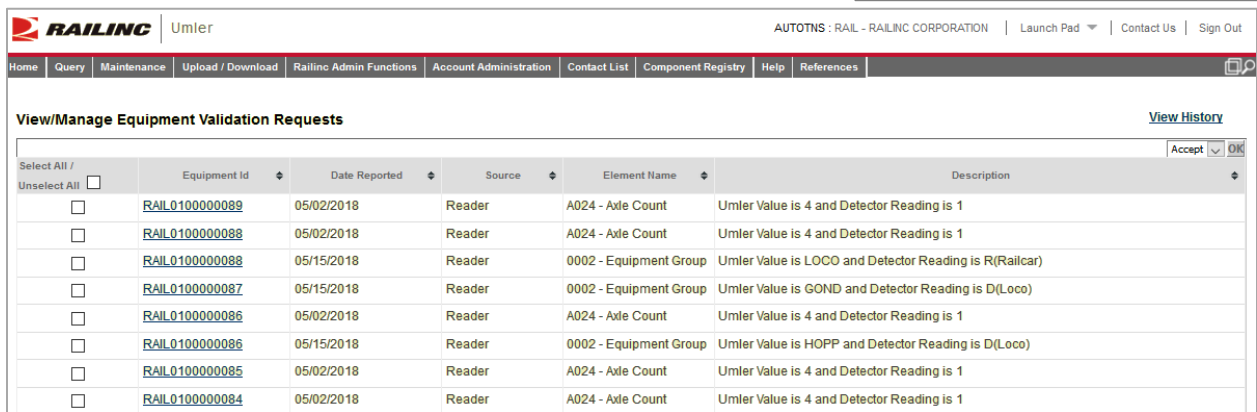


This Quick Guide walks Umler users through Equipment Validation Requests.

The Company Administrator controls each user’s access to view, accept or reject equipment validation requests in the Umler system. The user managing the equipment must have “Umler Access for Maintenance” and “Umler Access for Query” in Umler. See Additional Resources at bottom of the page.

Use this procedure to accept/reject equipment validation requests and view history:

1. Sign in to **Launch Pad** and navigate to **Umler**.
2. From the Umler Home page, select **Equipment Validation Requests** link.
3. Select the **Equipment ID** by clicking the appropriate checkbox(es).

| Select All / Unselect All | Equipment Id | Date Reported | Source | Element Name | Description |
|---------------------------|--------------------------------|---------------|--------|------------------------|--|
| <input type="checkbox"/> | RAIL0100000089 | 05/02/2018 | Reader | A024 - Axle Count | Umler Value is 4 and Detector Reading is 1 |
| <input type="checkbox"/> | RAIL0100000088 | 05/02/2018 | Reader | A024 - Axle Count | Umler Value is 4 and Detector Reading is 1 |
| <input type="checkbox"/> | RAIL0100000088 | 05/15/2018 | Reader | 0002 - Equipment Group | Umler Value is LOCO and Detector Reading is R(Railcar) |
| <input type="checkbox"/> | RAIL0100000087 | 05/15/2018 | Reader | 0002 - Equipment Group | Umler Value is GOND and Detector Reading is D(Loco) |
| <input type="checkbox"/> | RAIL0100000086 | 05/02/2018 | Reader | A024 - Axle Count | Umler Value is 4 and Detector Reading is 1 |
| <input type="checkbox"/> | RAIL0100000086 | 05/15/2018 | Reader | 0002 - Equipment Group | Umler Value is HOPP and Detector Reading is D(Loco) |
| <input type="checkbox"/> | RAIL0100000085 | 05/02/2018 | Reader | A024 - Axle Count | Umler Value is 4 and Detector Reading is 1 |
| <input type="checkbox"/> | RAIL0100000084 | 05/02/2018 | Reader | A024 - Axle Count | Umler Value is 4 and Detector Reading is 1 |

4. From the drop-down list in the upper right side of the page, select **Accept** or **Reject** from the list. Click **OK**.
 - a. Select **Accept** to opt to correct the issue, whether it requires a manual update in the Umler Modify Equipment page or fix of the AEI tag.
 - b. Select **Reject** when the equipment or tag has already been corrected or is not a validation issue.
5. Click the **View History** link to view the history of all equipment IDs that have been Accepted or Rejected, or are older than 90 days without any action being taken.

Understanding Equipment Validation Requests

An active **Equipment Validation Request** record is created when detectors log 4 or more bad reads for Axle Count (A024) when comparing equipment to Umler data or AEI tag mismatches of Equipment Group (0002)

An **Equipment Validation Request** record is moved to History when records in Umler are Accepted or Rejected, or a record is older than 90 days and no action has been taken

An **Equipment Validation Request** record is deleted when detectors log 3 or more good reads (following 4 or more bad reads) or a record is deleted from History after 90 days

Ticklers: When an Equipment Validation Request is created on active equipment, an Umler Tickler notification should be created and sent to the equipment (car) owner for the equipment. See the [Umler User Guide](#) for details on setting up ticklers.

Additional Resources

The following additional resources are available:

- Consult the [Umler User Guide](#) for more information about using the Umler system.
- View the [Umler Reference Material page](#) to access other essential resources for using the Umler system.

Contact the Railinc Customer Success Center at 1-877-RAILINC (1-877-724-5462) or csc@railinc.com if you need assistance.